

HELPFUL INSTRUCTIONS FOR OPERATING YOUR NEW EVERSHARP REPEATING PENCIL

TO USE PENCIL.—Hold pencil with point down. Press the top (a) down and a lead will appear at the pencil's tip ready for writing. See Fig. 1. As you use up the amount of lead extending from the tip simply **press down on the top** and more lead will appear at the point. **Twelve** sticks of lead can be used in this way before you need refill the pencil.

REPELLING LEAD.—If a lead sticks out too far from the pencil's tip, press the top (a) down. **Hold** the top down while you **push** the lead back with your finger. See Fig. 2.

TO RELOAD PENCIL. Remove the top (See Fig. 3). Then drop leads into magazine (e) through narrow slot (f)

WARNING.—**Never load more than twelve sticks of lead in the magazine.** To avoid overloading, **before filling** the magazine press the top down several times. Also, **shake the pencil** several times and listen for rattle of lead sticks which may have lodged in magazine. **Be sure to use only EVERSHARP SQUARE LEADS.** No other leads will fit this pencil.

CLEANING TIP.—Unscrew tip (b) counter-clockwise. Then push a square lead through the tip until it shows at small end. See Fig. 4.

TO USE ERASER.—Pull top (a) out of barrel. Next, reverse the top section and put it back in the barrel so that the eraser will be exposed.

ASSEMBLING NEW ERASER.—Take off top. Insert a pin point at slot (s) of cap (c). Pry out worn eraser and bushing. Insert a New No. 5R Eversharp Eraser and bushing (h) and push into cap.



Be Sure to Refill Your **EVERSHARP** With
Genuine **EVERSHARP LEADS**
EVERSHARP LIMITED

197, GT. PORTLAND STREET, LONDON, W.1, ENGLAND.

MADE IN ENGLAND

IMPORTANT. The appearance of a small copper coloured rim at the top end of this pencil is an indication that the magazine is empty and that a fresh supply of Eversharp Refills is needed.